



It is recommended that only persons who have sufficient knowledge and experience such as system designers and responsible persons deal with this product after carefully reading the product manual.

1 The matters of safety

WARNING

- * Do not fabricate or do maintenance by yourself. Malfunction, Electric shock, and fire danger are considered. Contact us directly if you need the item to be repaired.
- * Do not let the water touch the product. It may cause electric shock or fire due to malfunction.
- * When you check or maintain the product, make it sure you turn off the power. It may cause electric shock or fire due to malfunction.
- * The item should be fixed to the target tightly. Electric discharging or breakage might happen.
- * Please shield your installing circumstances first since the item releases the soft X-ray. Direct X-ray exposure is not recommended owing to cause health problem.
- * It includes a beryllium window on the x-ray tube unit in order to release soft x-ray for ionization. This beryllium material can cause respiratory disorder only if the person gets exposed to forms of either beryllium powder or smoke. However, our device doesn't creat beryllium in neither of the mentioned forms. Please be careful not to break the device since there might be a slight chance that the device could partially degrade into the powder form, then it can cause harm defects. If the user touches the beryllium material on the device, clean oneself on the running water or rinse it off with soap directly. If the beryllium window gets dirty or damaged, call us directly for assistance.
- * Do not use the product at the place where dangerous material such as inflammable or ignitable material exists. This product is not the product of anti-explosive type.
- * This device is made only for industrial uses. You need to ground the device beforehand. Otherwise, there are in case of malfunction, electric shock, or fire damage.


CAUTION

- * Do not disconnect the head cable with power applied. There is a possibility of electric shock or malfunction.
- * Connect wires referring to the product manual. Wrong connection can cause failures.
- * For your proper cable connection, take a look at the manual 'Installation & Connection,' for references. Any disordered connection is detected, the malfunction might arise.
- * All cables should be connected all the time. Please careful of cable disconnections. If power or communication cables got damaged, replace them immediately. Malfunction and fire danger may happen.
- * Do not install the device where the vibration can be detected. Any minor impact or vibration on the device, the malfunction or danger of accident might happen.
- * Do not use the item off the range of usage(Electrostatic elimination). Malfunction or danger of accident may occur.
- * If you wish to discard the head unit of X-ray device, you need to report for disuse declaration to the institution(s) where they ask to. A proper declaration procedure is necessary in order to disuse X-ray device. Please contact to either Korea Institute of Nuclear Safety(KINS) or a safety supervisor of Sunje directly.


2 Check the package contents

Product compositions


The package includes the following products composition.

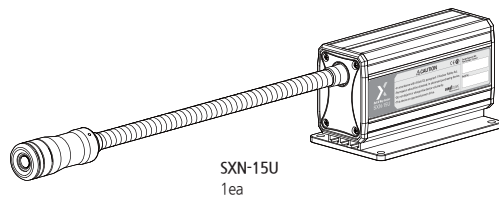

SXN-15U
1ea

 

 * Fixing Bolt
SFB-XN-1-002
1/4"-20unc x 15L / 4ea
1/4"-20unc x 8L / 1ea
M4 x 0.7Pitch x 10L / 2ea




* Adapter
SAD-MT-3-002
INPUT : AC 100~240V, 50/60Hz
OUTPUT : DC24V, 1A
1.6m / 1ea



* Output Cable
SOC-XN-3-004
15m / 1ea



 * Extension Power Cable
SEC-MT-1-001
15m / 1ea




* Power Cable
SPC-MT-1-001
AC 100V, 50/60Hz, 1.8m / 1ea
or
* Power Cable
SPC-MT-2-001
AC 220V, 50/60Hz, 1.8m / 1ea

Option

If you require extra functions with the basic accessories we provided, you need to purchase optional items in below for further assistant.



 * Time Reader
SXN-TR2




* RMS Controller
RMSU

3 Nomenclatures of parts

SXN-15U

Front

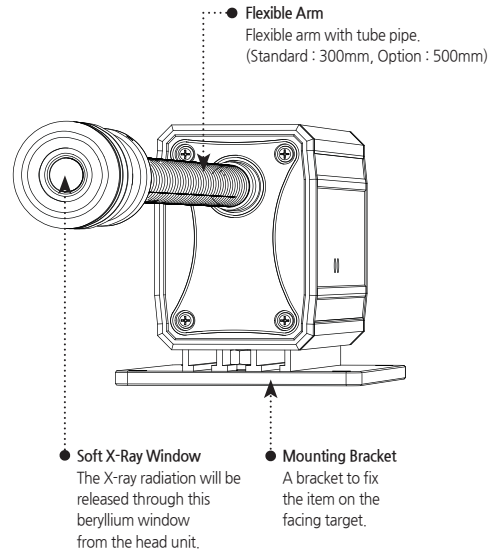


● **Flexible Arm**
Flexible arm with tube pipe.
(Standard : 300mm, Option : 500mm)

● **Soft X-Ray Window**
The X-ray radiation will be released through this beryllium window from the head unit.

● **Mounting Bracket**
A bracket to fix the item on the facing target.

Rear

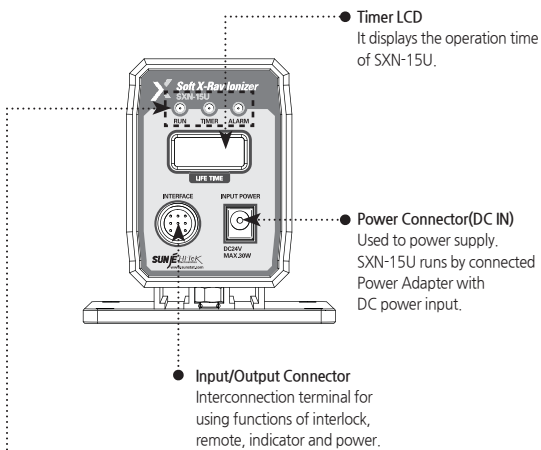

● **Timer LCD**
It displays the operation time of SXN-15U.

● **Power Connector(DC IN)**
Used to power supply.
SXN-15U runs by connected Power Adapter with DC power input.

● **Input/Output Connector**
Interconnection terminal for using functions of interlock, remote, indicator and power.

Indicator Light


- **Green LED (RUN)** Operating indicator
- **Orange LED (TIMER)** Tube replacement Alarm indicator
- **Red LED (ALARM)** Malfunction Indicator

Green LED will be on when the item is in operating condition.

Once the unit reaching 4,500 hours of operation, Orange LED will be on.

When false operation, Red LED will be on.

SXN-U Time Reader (Option)

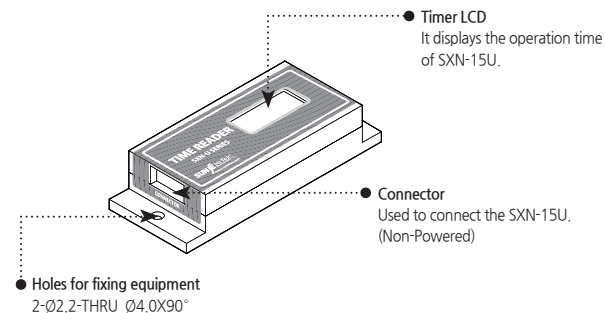

● **Timer LCD**
It displays the operation time of SXN-15U.

● **Connector**
Used to connect the SXN-15U.
(Non-Powered)

● **Holes for fixing equipment**
2-Ø2.2-THRU Ø4.0X90°

4 Installation and connection


Check the installation conditions SXN-15U

Please check the installation condition whether it meets proper specification.

- **Shielded Room**
- **There must be no objects between the target area and X-ray device.**
- **No vibration on the fixed device.**
- **Be aware of any flammable or ignitable materials around the working area.**
- **Secure to have enough working space for quick maintenance of the device.**

SXN-15U fixing


Fix the target product on the fixed area where you install by using supported fixing bolt(s).

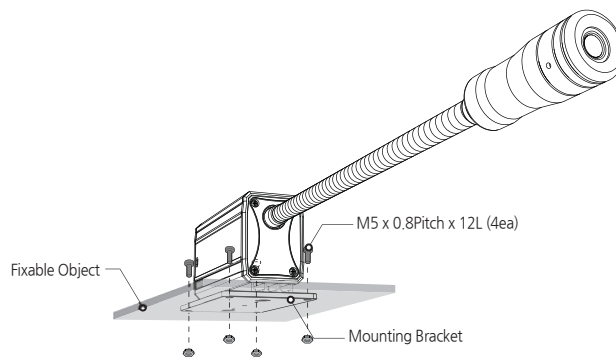

Shielding methods

Shielding Material Selection

See the following graph for references. Select the ideal tickness and quality of shielding material.

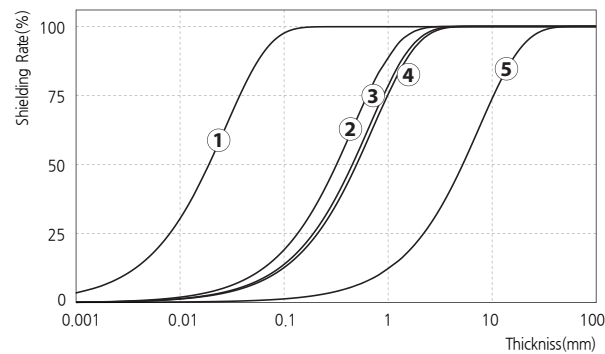


No.	Shield Material	Thickness [mm]
①	SUS	Over 0.4
②	Aluminium	Over 7.0
③	Glass	Over 10.0
④	PVC	Over 11.0
⑤	Acrylic	Over 120.0

WARNING

- * Please shield the area where the customer is willing to install the soft X-ray device for safety issue.
- * After shielding process, please connection to your own interlock system to operate the X-ray device On/Off when the door is opened/closed.

Shield installation compositions


Please refer to the "Installation Compositions" for your references. Please keep your working environment of the leakage radiation level within the range of 10µSv/hr all the time.

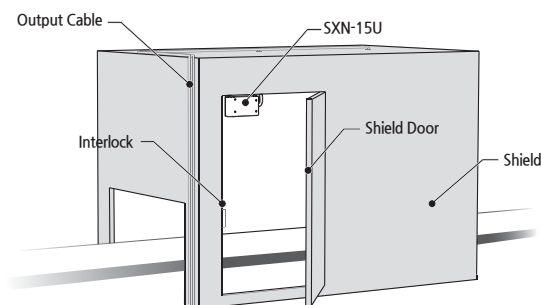


How to connect

Connecting the Output Cable and Power Cable

Connect Output Cable supplied with Power Cable with SXN-15U.
Connect another side of Output Cable with equipment.

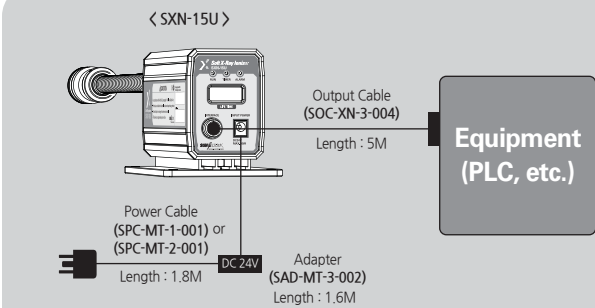

Output Cable No.

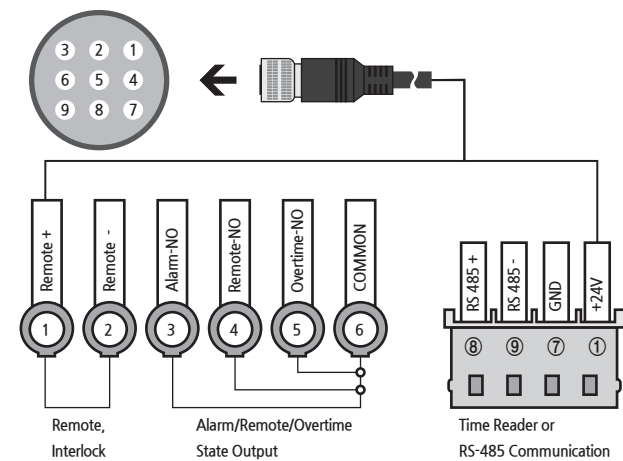

Output Cable Specifications


Signal	No.	Color	Pin Name	Function
Input	1	Yellow	Remote +	The terminal is for On / Off function of the product. (Close: Ionizer On, Open: Ionizer Off)
	2	Black on Yellow	Remote -	
Output	3	Orange	Alarm-NO	When alarm occurs, it opens with common terminal.
	4	Pink	Remote-NO	When remote function works, it is closed.
	5	Black on Orange	Overtime-NO	Replacement cycle alarming function helps it to be closed with common terminal after 4,500 hours use.
	6	Gray	Common	It is common terminal for Alarm, Overtime, Remote State.
Time Reader / RS485	1	Black on Gray	+24V	An Input power terminal of Time Reader.
	7	Black on Pink	GND	-
	9	White	RS485 -	RS485(-) communication terminal.
	8	Black on White	RS485 +	RS485(+) communication terminal.

CAUTION

- * As SXN-15U requires CD 24V, do not connect with any product using DC 12V. There could be danger of malfunction, electric shock, and fire. (Be cautious when connecting Remote/Interlock)

Connecting to the SXN-U Time Reader (Option)

It enables you to check the hours of use outside the equipment connecting Time Reader sold separately. Use Output Cable to connect SXN-15U with Time Reader.

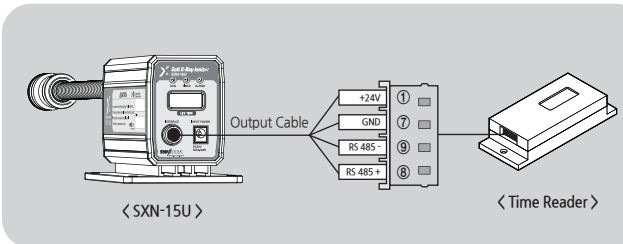


5 How to set

► Set the Remote / Interlock

Remote / Interlock On

When the contact of Output Cable No.1 and No.2 is closed, It changes to Remote / Interlock On. It means that the door of shielding material is securely locked and ready to operate. Green LED(RUN) on the back of product is turned on under Remote / Interlock On.

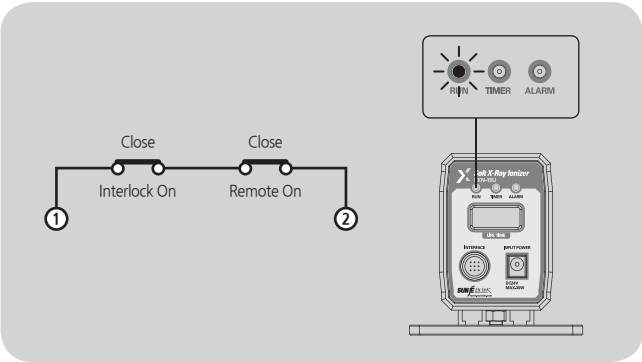

Remote / Interlock Off


When the contact of Output Cable No. 1 and No.2 is opened, It changes to Remote / Interlock Off. It means that the door of shielding material is opened and the product doesn't operate. Under Interlock Off state, product doesn't work despite Remote on. Green LED(RUN) on the back of product is turned off under Remote / Interlock Off.

Signal	Product Operation State
	Off
	Off
	Off

► Alarm state output


Alarm On

When the contact of Output Cable No.3 and No.4 is opened, it changes to Alarm On. Under Alarm On state, It instructs the malfunction of product as Red LED(ALARM) on the back of product is turned on.

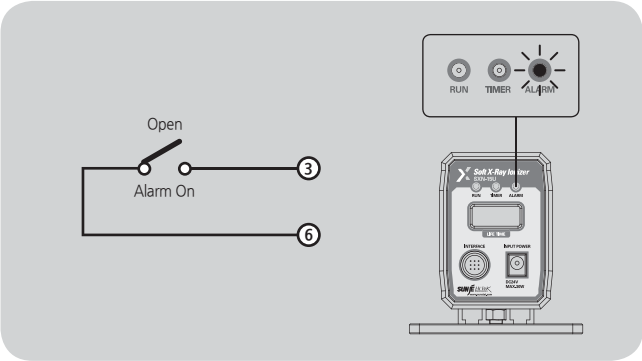

Alarm Off


When the contact of Output Cable No.3 and No.4 is closed, It changes to Alarm Off. Under Alarm Off state, It indicates normal operation of product and Red LED(ALARM) on the back of product is turned off.

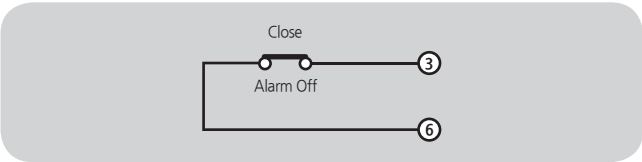

► Remote state output


Remote On

When the contact of Output Cable No.4 and No.6 is closed, It changes to Remote On. Under Remote On state, It indicates normal operation of product and Green LED(RUN) on the back of product is turned on.

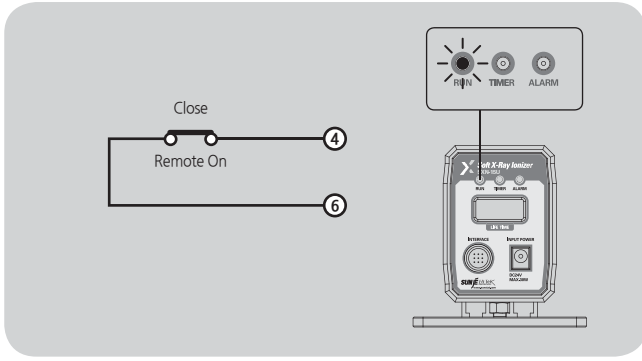

Remote Off


When the contact of Output Cable No.4 and No.6 is opened, It changes to Remote Off. Under Remote Off State, product doesn't work as Green LED(RUN) on the back of product is turned off.

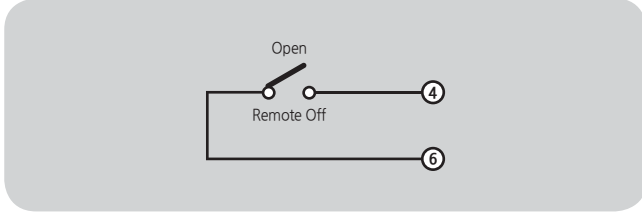

► Overtime state output


More than 4,500 hours

If the hours of use exceeds 4,500 hours, Orange LED(TIMER) is turned on, and it means the replacement time.

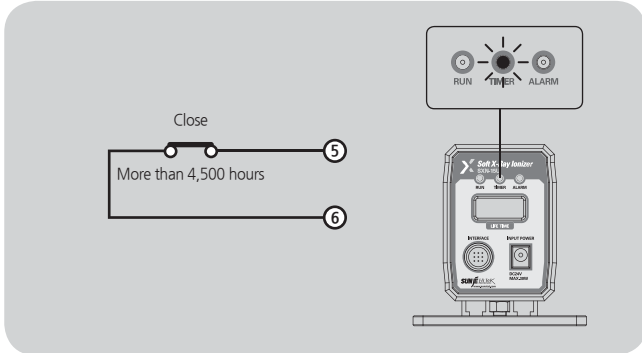

Less than 4,500 hours

If the hours of use below 4,500 hours, orange LED(TIMER) doesn't turned on, and it means does not replacement time.

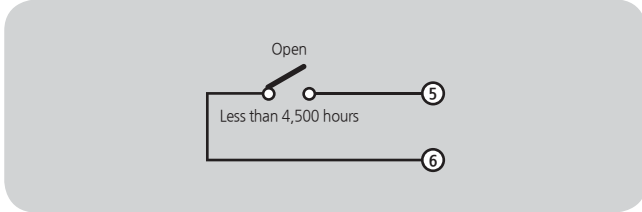

► RS-485 Communication(Optional)

Communication		
Baud		9600
Parity Bit		None
Data Bit		8
Stop Bit		1


6 Problem solving

► Checklist before called


Problem	Identifying Problem	Solution
Not Operating	Is your power cable still plugged in?	Please re-plug the power cable and then turn the device on again.
	Was the proper voltage level applied for this set-up?	Please use the proper level of power input for the device (AC 100~240V, 50/60Hz)
	Is remote off?	Clear the remote off corresponding to 'Remote Setup' manual.
	Is interlock off?	Place interlock on corresponding to 'Interlock setup' manual.
No Signal	Have you followed the proper procedure for input/output signal cable(s)?	Check whether the cable connection is properly done.
Decreased Performance	Any damages or cut on the cables?	You need to replace the cables if it gets cut or damaged.

7 Dimensions

► SXN-15U

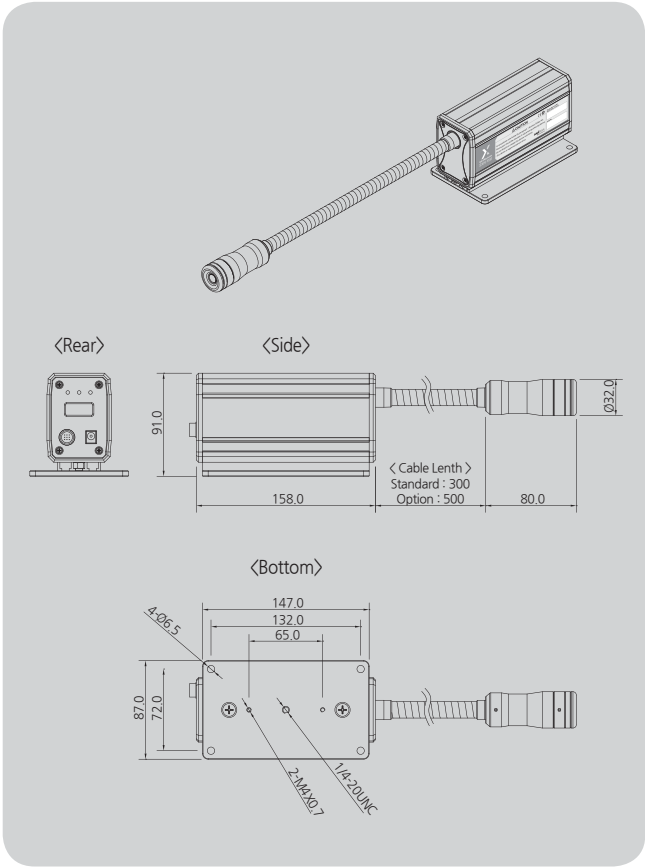

► SXN-U Time Reader (Option)

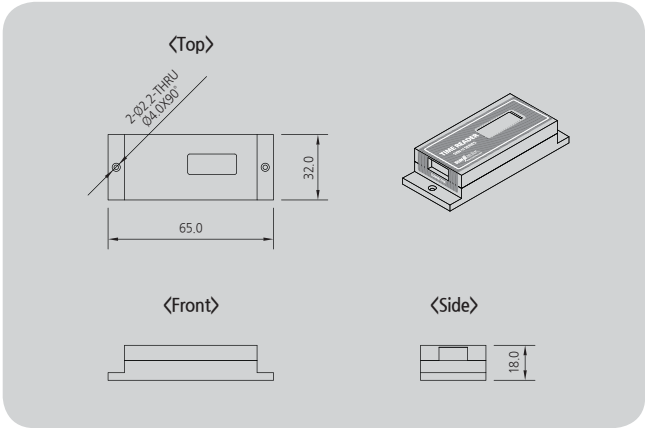

8 Specification

► SXN-15U

Parameter	Description / Value	Remarks
Ion Generation Method	Soft X-ray	
Source	Soft X-ray Tube	
Tube Voltage	14.9kV	
Cooling Method	Natural Air Cooling	
Mounting Method	Bolt Mounting with Bracket	
Power Consumption	13W	
Current Consumption	Max. 59mA	AC 220V
Operation Circumstance	Power : 0℃ ~ +36.5℃ / Head : 0℃ ~ 52℃	
Weight	1.4kg	
Input Power	AC 100~240V, 50/60Hz(Adaptor Input)	DC 24V, 1A Adapter
Alarm	Head Fail	
Warning	Life Time Over	
Remote / Interlock	Remote / Interlock On/Off Control	
Indicator	Alarm State, Over Time State	
Warranty	1 Year	

※ The appearance and specification of the product may be changed without prior notice for the improvement of the product.

SUNJE Electrostatics

www.sunstat.com

Head Office & Factory (Busan)
8 Cheongwang-gil, Ilgwang-Myeon,
Gijang-Gun, Busan, Korea
T) +82-51-720-7500 F) +82-51-720-7501

Sunje Japan Co., Ltd.
Dai 7 Matsuya Bldg 10F 1005 2-23, Honmachibashi,
Chuo-ku, Osaka, Japan
T) +81-6-6949-5001 F) +81-6-6949-5011

Sales Headquarter (Osan)
795 Naesammi-dong, Osan-si, Gyeonggi-do,
Korea
T) +82-31-203-9034 F) +82-31-202-9034

Sunje (SHANGHAI) Trading Co., Ltd.
Block C, 4F, No 482, Hongxu Road, Minhang District,
Shanghai, China
T) +86-21-5433-9761 F) +86-21-5433-9762

Customer Center +82-70-7714-9033
Sales Contact +82-31-203-9034

Sunje Technology Co., Ltd.
2F, No 6, Lane 102, Sinhe Rd, Sinfong Township,
Hsinchu County, Taiwan 30472
T) +886-3-568-7891 F) +886-3-568-7950