

# Soft X-ray Ionizer

## Electrostatic Total Solution

### SXH-10H

Suitable Ionizer for super clean process as there is no dust, electromagnetic wave, ozone. Compatible with other company's product and the performance and convenience is proved.

### Key Features

- Compatible with other company's product
- Slim size is useful to be installed in narrow, small space
- Compatible with various signal system of equipment and facility (Option)



• Ionizer (SXH-10H)



• Controller (SXC-104)

### Specifications

#### • Ionizer (SXH-10H)

Parameter	Description / Value
Ion Generation Method	Soft X-ray
Source	Soft X-ray Tube
Tube Voltage	11kV
Beam Angle	150°
Power Consumption (With Cont.)	Max. 10W ( Based on 1 Head )
Operation Circumstance	0°C ~ +50°C(32°F ~ 122°F), 35% ~ 85% RH
Weight	0.36kg
Warranty	1 year

#### • Controller (SXC-104)

Parameter	Description / Value
Input Power	AC 100~240V, 50/60Hz
Power Consumption (With Ionizer)	56W
Fuse	250V, 3A, 5X20 Glass Type Fuse
Operation Circumstance	0°C ~ +50°C(32°F ~ 122°F), 35% ~ 85% RH
Weight	1.22kg
Alarm	Head Fail, Head Abnormal
Warning	Life Time Over
Interlock	Interlock On/Off Control
Remote	Remote On/Off Control
Interface Output	Power State, Interface State, Run State, Alarm State
Warranty	1 Year


※ The appearance and specification of the product may be changed without prior notice for the improvement of the product.

# Soft X-ray Ionizer


## Electrostatic Total Solution

### Performance

- Decay Time :  $\pm 1,000V$  to  $\pm 100V$
- Charge Plate Capacitance : 20pF (150 X 150mm)
- Temperature & Humidity : 24°C, 50%RH
- Model : SXH-10H

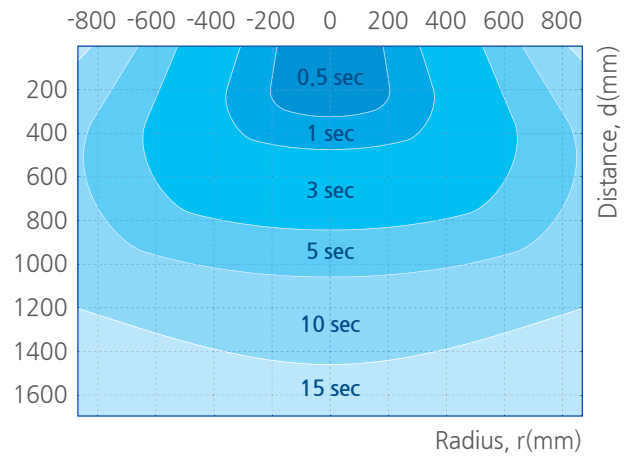

### Dimensions

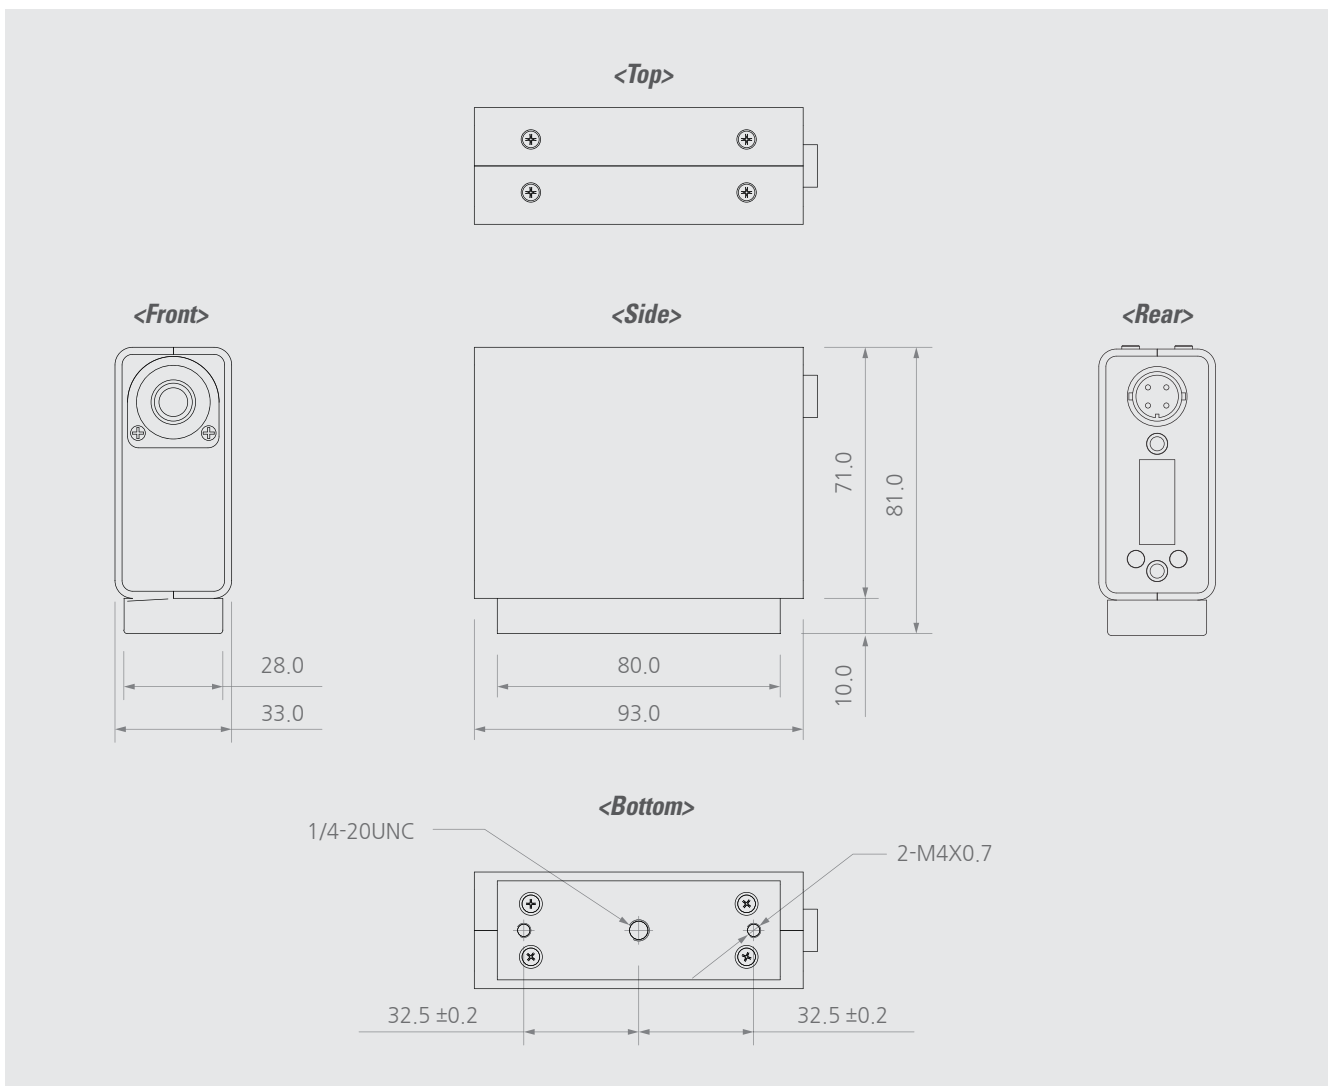

# Radiation Shielding methods

## Electrostatic Total Solution

### What are soft X-rays?


X-ray can be sorted according to its penetrating power, and an X-ray which has weaker penetrating power that can be absorbed easily in thin layer of the air is called the soft X-ray.

#### Benefits of Soft X-ray Ionizer

- Perfect Ion Balance ( $\pm 0V$ )
- No CDA (Clean Dry Air) required
- No dust generation
- No ozone ( $O_3$ ) generation
- High ion generation density
- Static electricity can be removed even under inert gas conditions such as  $N_2$  and Ar

### Shield installation compositions

- \* Please be careful to avoid direct exposure from the soft X-ray, since it may cause any skin problems. Therefore, you need to shield the area where X-ray emits in order to protect yourself.
- \* Please keep in mind that allowed leakage level for radiation dose is  $10\mu Sv/hr$  or under, So keep your area under the mentioned level all the time. (The leakage level of radiation dose might differ in countries)
- \* Please refer to the below chart for possible materials of shielding and its acceptable thickness.

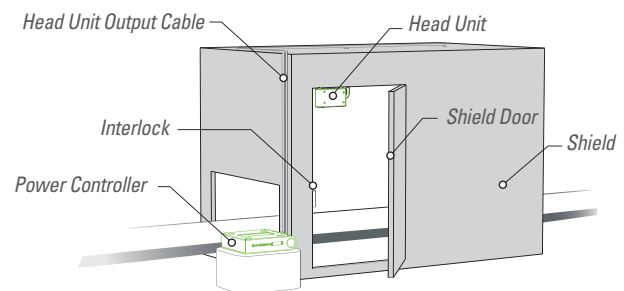


#### Radiation

With radiation You can ionize some substance, Energy flow that radiated substance generates.

Radiation is neither accumulated nor contaminated. Due to uncertainty that human cannot judge by five senses, its danger is exaggerated than the actual. Radiation can be made intentionally, but also stays in the nature at all times just like other energy flow.

### Shielding methods

See the following graph for references. Select the ideal tickness and quality of shielding material.

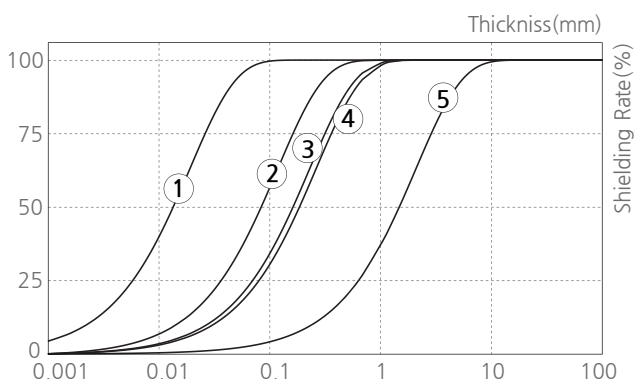

#### ⚠ Warning

- \* Please shield the area where the customer is willing to install the soft X-ray device for safety issue.
- \* After shielding process, please connection to your own interlock system to operate the X-ray device On/Off when the door is opened/closed.