

Soft X-ray Ionizer

Electrostatic Total Solution

SXH-15NH

Suitable Ionizer for super clean process as there is no dust, electromagnetic wave, ozone. With high power 15kV application, it is effective for wide area and long distance. Module structure type makes tube replacement easy on site as it can be separated or combined. Furthermore, purchase by individual part is economical.

Key Features

- With high power 15kV application, it is effective for wide area and long distance
- Easy attachable/detachable Module structure
- Prompt replacement is possible on the spot
- Cost saving due to individual Tube module purchase
- When the communication status between Head and controller is not normal, it stops automatically
- Individual control for 4 heads to turn on/off using RS-485 communication protocol
- With RMS(Real Monitoring System), possible to check operation status in real time (Option)

Specifications

- Ionizer [SXH-15NH]

Parameter	Description / Value
Ion Generation Method	Soft X-ray
Source	Soft X-ray Tube
Tube Voltage	14.9kV
Beam Angle	150°
Power Consumption (With Cont.)	Max. 25W (Based on 1 Head)
Operation Circumstance	0℃ ~ +50℃(32°F ~ 122°F), 35% ~ 85% RH
Weight	1kg
Warranty	1 year

- Controller [SXC-154NH or SXC-10BT]

Parameter	Description / Value
Input Power	AC 100~240V, 50/60Hz
Power Consumption (with Head)	SXC-10BT : Max. 130W
	SXC-154NH : Max. 110W
Controller Fuse	250V, 3A, 5X20 Glass Type Fuse
Operation Circumstance	0℃ ~ +50℃(32°F ~ 122°F), 35% ~ 85% RH
Weight	1.05kg
Alarm Function	H/V Abnormal, Communication Error
Interface	(Run, Alarm, Power, Over Time, Remote, Interlock) Remote On/Off, Interlock On/Off, Output State
Warranty	1 year

※ The appearance and specification of the product may be changed without prior notice for the improvement of the product.



• Ionizer [SXH-15NH]



• Controller [SXC-154NH]
1:4 Type




or • Controller [SXC-BT]
1:1 Type

Soft X-ray Ionizer

Electrostatic Total Solution


Performance

- Decay Time : $\pm 1,000V$ to $\pm 100V$
- Charge Plate Capacitance : 20pF (150 X 150mm)
- Temperature & Humidity : 20°C, 32%RH
- Model : SXH-15NH

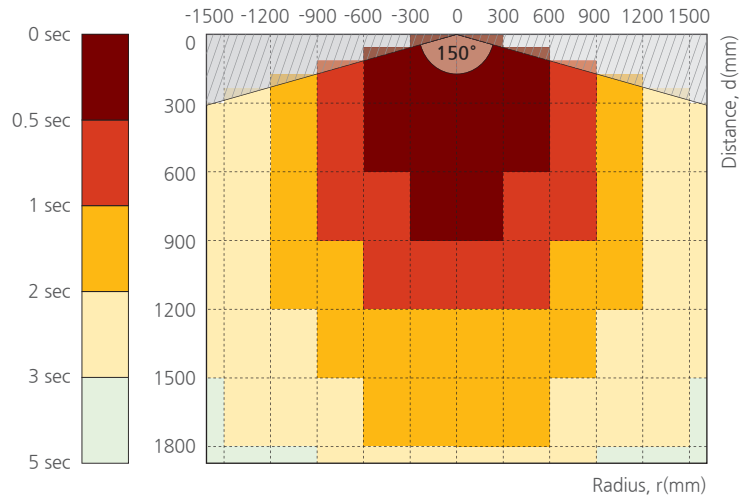


Dimensions

► SXH-15NH _Standard

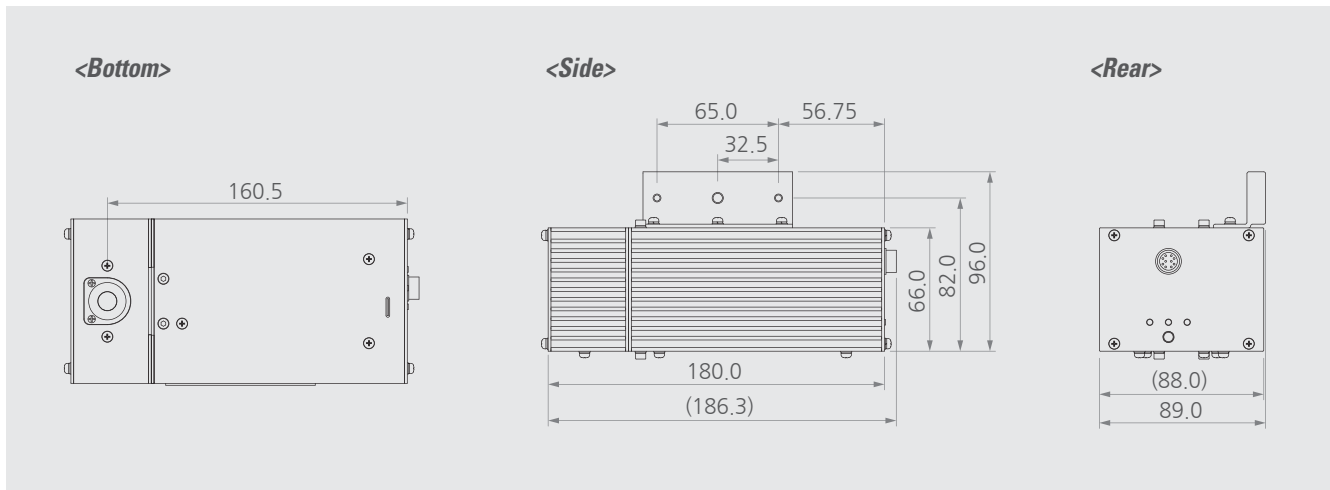

► SXH-15NH _Option

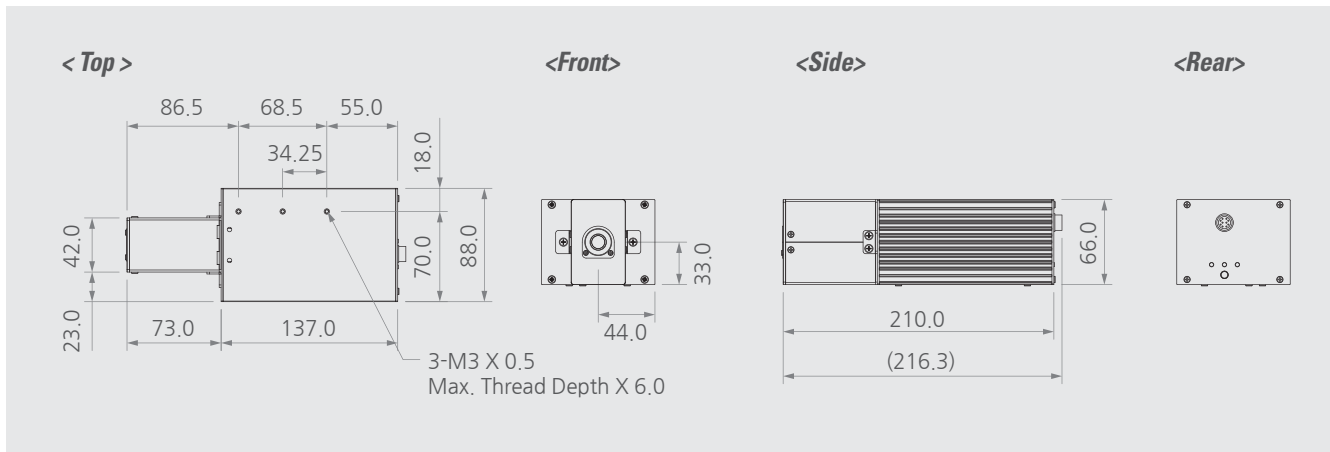

Radiation Shielding methods

Electrostatic Total Solution

What are soft X-rays?


X-ray can be sorted according to its penetrating power, and an X-ray which has weaker penetrating power that can be absorbed easily in thin layer of the air is called the soft X-ray.

Benefits of Soft X-ray Ionizer

- Perfect Ion Balance ($\pm 0V$)
- No CDA (Clean Dry Air) required
- No dust generation
- No ozone (O_3) generation
- High ion generation density
- Static electricity can be removed even under inert gas conditions such as N_2 and Ar

Shield installation compositions

- * Please be careful to avoid direct exposure from the soft X-ray, since it may cause any skin problems. Therefore, you need to shield the area where X-ray emits in order to protect yourself.
- * Please keep in mind that allowed leakage level for radiation dose is $10\mu Sv/hr$ or under, So keep your area under the mentioned level all the time. (The leakage level of radiation dose might differ in countries)
- * Please refer to the below chart for possible materials of shielding and its acceptable thickness.

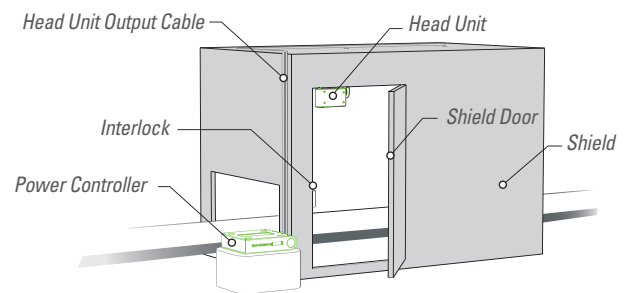


Radiation

With radiation You can ionize some substance, Energy flow that radiated substance generates.

Radiation is neither accumulated nor contaminated. Due to uncertainty that human cannot judge by five senses, its danger is exaggerated than the actual. Radiation can be made intentionally, but also stays in the nature at all times just like other energy flow.

Shielding methods

See the following graph for references. Select the ideal tickness and quality of shielding material.

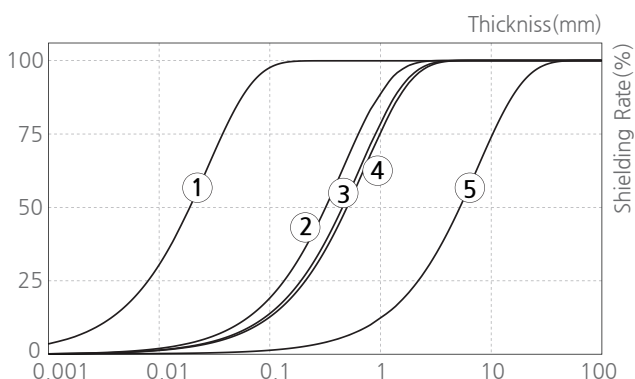

No.	Shield Material	Thickness [mm]
①	SUS	Over 0.4
②	Aluminium	Over 7.0
③	Glass	Over 10.0
④	PVC	Over 11.0
⑤	Acrylic	Over 120.0

⚠ Warning

- * Please shield the area where the customer is willing to install the soft X-ray device for safety issue.
- * After shielding process, please connection to your own interlock system to operate the X-ray device On/Off when the door is opened/closed.