

Instruction Manual

SUNJE

SBL-15S

Eng

It is recommended that only persons who have sufficient knowledge and experience such as system designers and responsible persons deal with this product after carefully reading the product manual.

1 The matters of safety

⚠ WARNING


- * If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.
- * Do not let the water touch the product.
It may cause electric shock or fire due to malfunction.
- * When you check or maintain the product, make it sure you turn off the power.
It may cause electric shock or fire due to malfunction.
- * Secure the product firmly when you want to secure it.
There is a possibility of accident due to fall-over or malfunction, etc.
- * Do not use the product at the place where dangerous material such as inflammable or ignitable material exists. This product is not the product of anti-explosive type.
- * This device is made only for industrial uses. You need to ground the device before-hand. Otherwise, there are in case of malfunction, electric shock, or fire damage.

⚠ CAUTION

- * Do not contact the discharge needle or terminal with power applied.
There is a possibility of electric shock or malfunction.
- * Handle the discharge needle with care as its tip is very sharp.
- * Connect wires referring to the product manual. Wrong connection can cause failures.
- * Take precautions as cables of the adaptor, the power line and communication line of each product may disconnect. If the cable is damaged, replace it immediately.
- * Do not install the device where the vibration can be detected. Any minor impact or vibration on the device, the malfunction or danger of accident might happen.
- * Do not use the product for the purpose outside of the range of the product use.
If the product is used for the purpose outside of the range of the use, it can result in the trouble or the shortened service life. Or an unexpected problem may occur.

2 Check the package contents

► Product compositions
The package includes the following products composition.

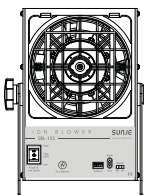

Ion Blower
SBL-15S
1ea



Adapter
SAD-MT-3-001
Input: AC100~240V, 50/60Hz
Output: DC24V, 1.0A
1.6m, 1ea



Ground Cable
SGC-MT-6-001
1m / Ø6-Ø4[O형]
/ 1ea



Power Cable
SPC-MT-1-001
AC 100V, 50/60Hz,
1.8m / 1ea

or



Power Cable
SPC-MT-2-001
AC 220V, 50/60Hz,
1.8m / 1ea




Signal Cable
SUC-MT-2-001
5m

► Option
If you require extra functions with the basic accessories we provided, you need to purchase optional items in below for further assistant.




RMS Controller
RMSU




UTP Cable
SUC-B3-1-001
5m

3 Nomenclatures of parts


Front

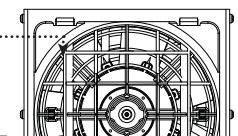


Front Cover
As the fan turns in high speed generating high voltage inside the fan, take precautions that foreign materials do not enter.

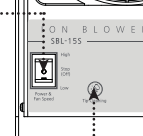


Power On/Off & Fan Speed Switch
The switch to turn on/off the power to the SBL-15S and to control the fan speed (2-way control).




Run State Indicating Lamp
This LED will show the status of the product (Run/Alarm) condition.



Buzzer Button
This button is used to turn on/off the alarm sound.




Tip Cleaning Button
This button is used to clean the discharge needle.




Address Settings
The address is used when you want to control and monitor the product using a PC.

Rear

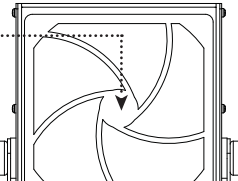


Pre-Filter
This filters off dust from air. The filtered air minimizes dust accumulation on discharging needle.




Knob
Adjust the direction of fan.



Ground Terminal
Used to connect the ground cable.



Power Connector (DC IN)
Used to power supply.



Interface Terminal
When user wants to control run/alarm output, remote(On/Off), or RS 485 communication.

4 Installation and connection


⚠ WARNING

- * Please adjust the device in the proper position upon the area you install.
The item should be laid on the flat surface.
- * When installing the device, please be aware of high temperature/humidity.
- * If there are any random objects that are closely surrounded or touched the target object, the ionizing performance might decrease. Please consider the area where you install.
- * The performance of device will decrease if the ground is insecurely connected.
The proper ground connection is always a first thing to consider.

► Caution for installation


How to basic installation

When installing products, you should leave a space of minimum 30mm on both sides and minimum 100mm on the back.

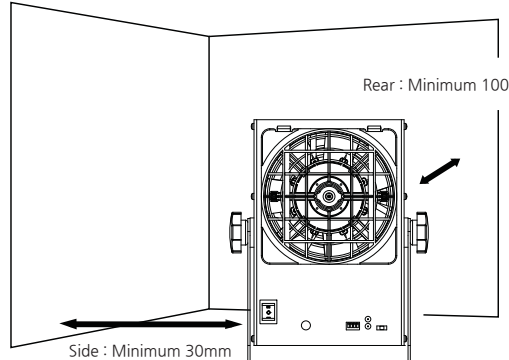


When installing more than two units

When installing more than two units of SBL-15S, leave a space of minimum 100mm between products.

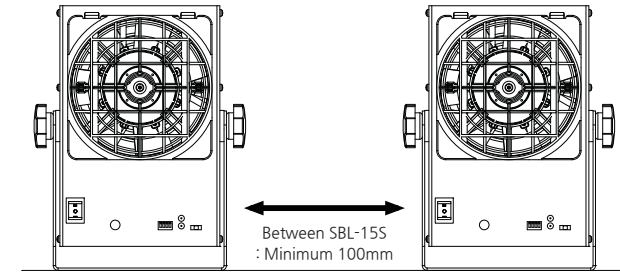


Installation against the target of de-electrification

Install the product with the distance of more than 100mm.
When installed within 100mm, the phenomenon of reverse electrification can occur.

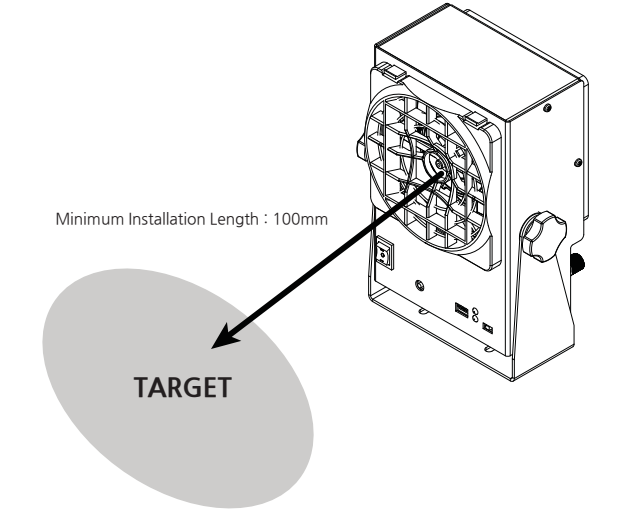


► Mounting method

Fix the mount at the place where you want the SBL-15S to be fixed using Ø5mm bolt.

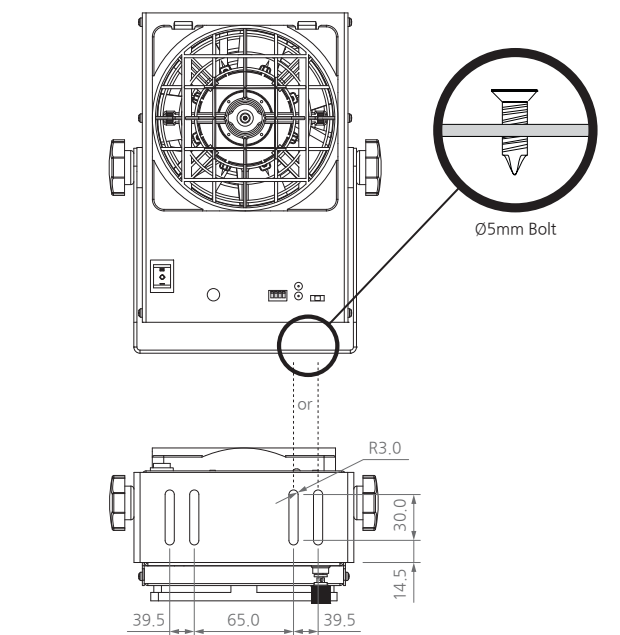

► How to connect


Refer to the figure below to connect the product.

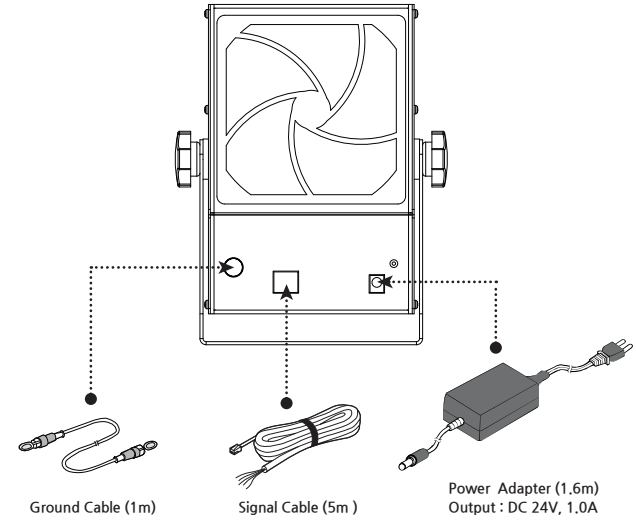


※ Be sure to ground the body of SBL-15S in order to secure the stable performance of the product and to prevent electric shock.
Connect the signal cable when you want to output on the outside.
The input power of the power adaptor is AC 100~240V, 50~60Hz.

► How to connect the Interface (Signal Cable)


For the specification of the signal cable to be used, refer to the table below.

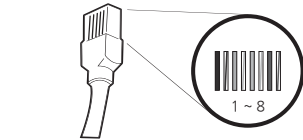

No	COLOR	Descriptions	Remarks
1	Brown	RS 485 +	RS 485 Communication (Run,Stop,Tip Cleaning Signal)
2	White & Brown	RS 485 -	
3	Orange	Ground	-
4	White & Orange	Remote	If the #4 and #3 pins are short-circuited, the product stops operating
5	Green	Tip Cleaning	The tip cleaning motor is rotated when #5 & #3 pins are closed more than 1 second
6	White & Green	Run State	When #6 & #8 pins are closed, SBL-15S is working
7	Blue	Alarm (Ion Unbalance / Fan)	When #7 & #8 pins are closed, SBL-15S is signaled alarm
8	White & Blue	Common	-

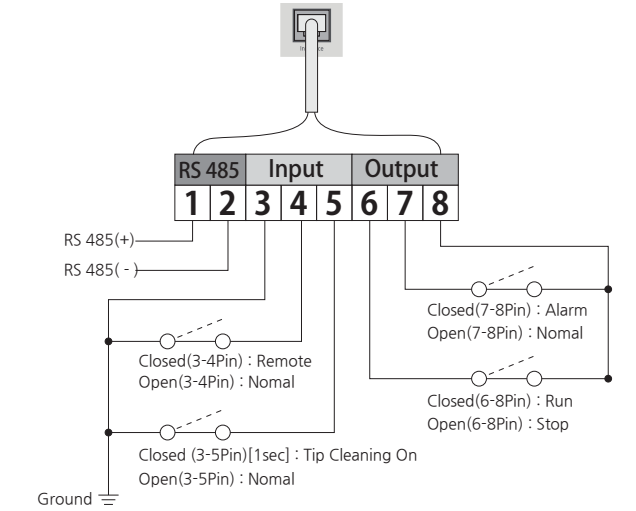


► Input / Output

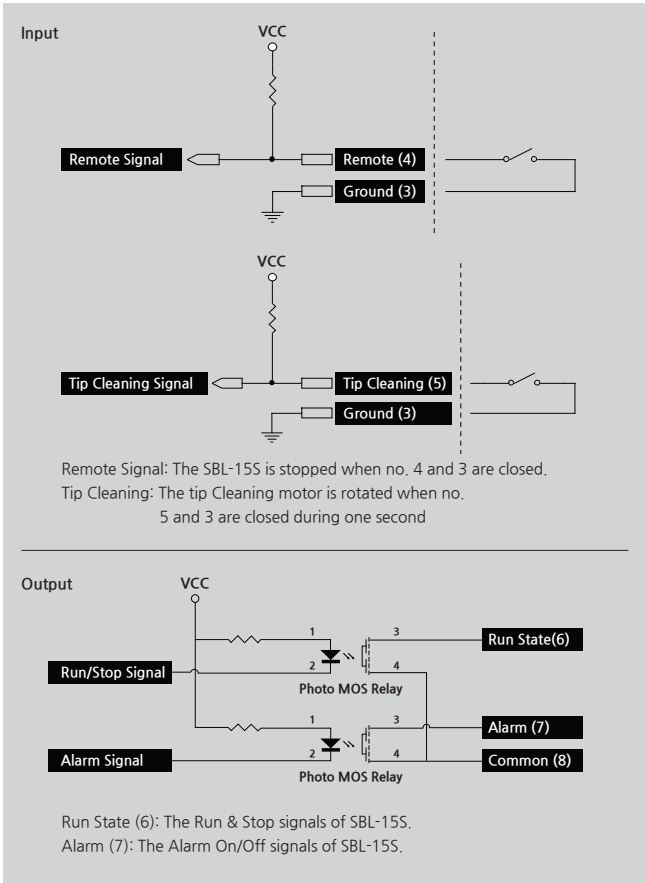


► Connection with PC

It is possible to control the run/stop, alarm and tip cleaning operation of the SBL-155 by using a computer.

The method of connecting to computer using RS-232/RS-485 Converter

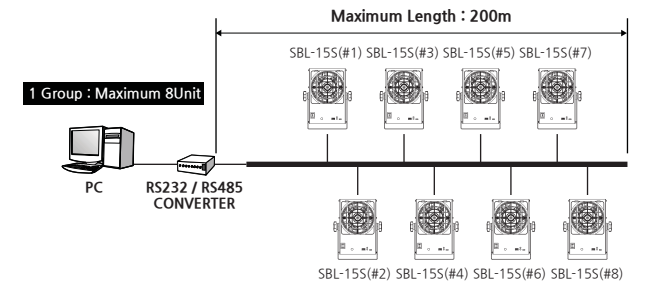


The method of connecting to computer using Multi-Port

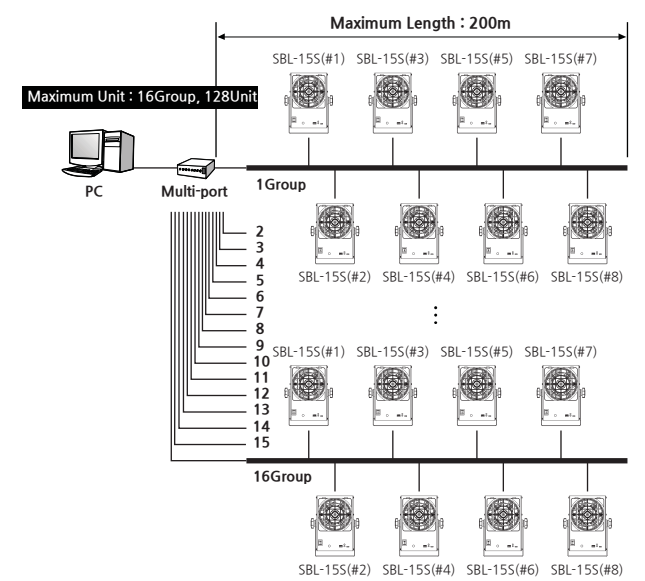


► How to set the Address

In order to connect the maximum eight units of SBL-155 to one group, you should assign the specific numbers (addresses) to each SBL-155 by setting the address switch like the figure below. For the method of installing #1~#8, refer to the figure below.

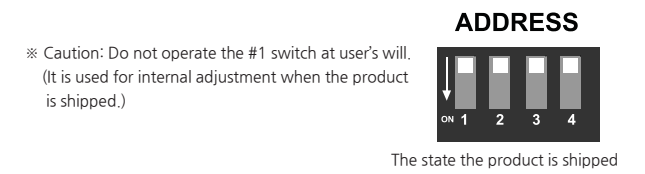

How to set by addresses

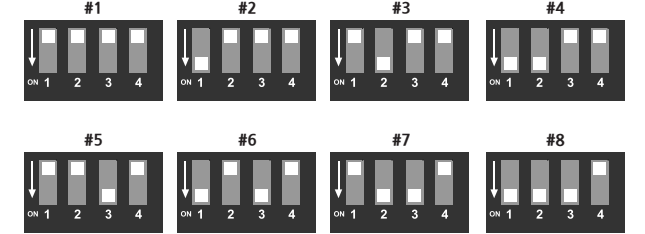

5 Maintenance

Maintenance is an essential item for maintaining its capacity. Please conduct a routine maintenance according to the below description. The life time of a discharge needle can be a difference depending on using circumstance. SBL-155 needs a routine maintenance and cleaning in case of bad circumstance.(high humidity or dust)
Therefore, the discharge needle is recommended to be cleaned regularly.
(At least once a month)

CAUTION

- * This device uses the high level of voltage.
When operating maintenance, please power off and unplug the device.
Otherwise, there might be in case of electric shock or fire damage.
- * The discharge needle is very sharp at the edge. Do not phsically(directly) touch the discharge needle.
- * Do not remove the front cover(Grill) when the product is operating.
There is a risk of electric shock and accident.

► Tip cleaning

Tip cleaning button

SBL-155 has a brush to clean a discharge needle. When the "Tip Cleaning" button on the front is depressed, SBL-155 will clean the discharge needle automatically for 10 seconds after Fan's operation is stopped.

Manual tip cleaning

- Clean a discharge needle in person in case of its serious contamination.
- Be sure to power off before cleaning the ionizer.
 - Please open the front cover of a SBL-155.
 - Soak the cotton swab with alcohol (do not use acetone).
 - Put the swab on the needle and wipe it turning the swab right and left (take precautions not to apply severe force to the needle).
 - Replace the damaged needle.
 - After the cleaning, let the alcohol applied to the needle surface evaporate completely and then operate the SBL-155.
 - Please record the cleaning process as a reference in the file.

► The cycle of replacing the electricity removal discharge needle

- Check during the discharge needle cleaning and take action.
- Replace the broken or severely damaged discharge needle.
When replacing, please be careful not to touch edge of the needle it might break easily.
 - The discharge needle is very sharp at the edge. Do not phsically(directly) touch the discharge needle.
 - The general cycle of needle replacement is one year, however, it can vary depending on the environment of use.

► Cleaning of the fan filter


- In case of fan filter, we recommend you to clean it once a week.
- Be sure to power off before cleaning the ionizer.
 - Wash the filter in the running water.
 - Completely dry the filter and insert it into the fan cover.
 - In case the fan filter is severely damaged, replace it.

6 Problem solving

► Checklist before called

Problem	Identifying Problem	Solution
The product does not work.	Is your power cable still plugged in?	Please re-plug the power cable and then turn the device on again.
	Was the proper voltage level applied for this set-up?	Please use the proper level of power input for the device. (AC 100~240V, 50/60Hz)
	Is the swith off at back of the device?	Turn on the power switch.
There is no ionization.	Is there any conductive material around the device?	Please refer to 'Installation & Connection,' for setting the proper target distance from the device.
	Does the installed environment have too high/low level of humidity or temperature?	Please install the device upon the proper working specification.
The ionizing performance has been decreased.	Can't possibly ground the device?	Please refer to 'Installation & Connection,' for(proper) grounding the device.
	Any damages or cut on the cables?	You need to replace the cables if it gets cut or damaged.
	Any contamination on the discharge needle?	Please refer to 'Maintenance,' for cleaning the discharge needle.

7 Dimensions

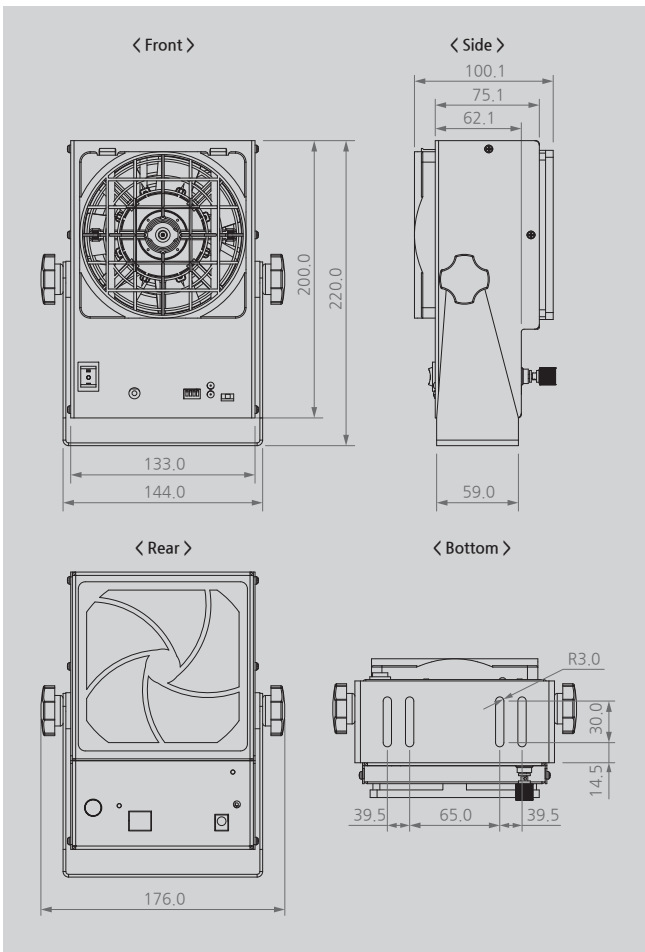

8 Specification

Parameter		Description / Value
Input Power		DC 24V (Adaptor [AC110~220V, 50/60Hz, DC 24V, 2.5A])
Power Consumption		24W
Current Consumption		109mA (AC 220V)
Ion-Generation Method		Steady-State DC
Air Flow		4.84m ³ /min
Noise Level		62dB
Ion Balance		within ±5V (600mm, Maximum Air flow)
Ozone(O ₃) Concentration		≤0.05ppm
Operation Circumstance		0°C~+50°C (32°F~122°F), 35%~85%RH
Main Body Material		EGI
Electrode Material	Standard	Tungsten
	Option	Titanium
Mounting Method		Desk Top
Weight		1.94kg
Function		Tip Cleaning, 2Steps Fan Speed
Alarm Function		Ion Unbalance Alarm
Interface		Remote On/Off, Run State, RS485, Alarm(Ion Unbalance), Tip Cleaning
Option		RMS(Real Monitoring System)
Warranty		1 year

※ The appearance and specification of the product may be changed without prior notice for the improvement of the product.

SUNJE Hi-Tek Co., Ltd.

www.sunstat.com

Head Office & Factory (Busan)
8 Cheonggwang-gil, Ilgwang-eup,
Gijang-Gun, Busan, Korea
T) +82-51-720-7500 F) +82-51-720-7501

Sunje (SHANGHAI) Trading Co.,Ltd.
2058, Building A, No.1018 Mingzhu Road,
Qingpu District, Shanghai, China
T) +86-21-5433-9761 F) +86-21-5433-9762

Sales Headquarter (Osan)
3rd floor, 129-20, Gyeonggi-daero 632
beon-gil, Osan-si, Gyeonggi-do, Korea
T) +82-31-203-9034 F) +82-31-202-9034

Sunje Technology Co., Ltd.
2F, No.6, Lane.102, Sinhe Rd, Sinfong
Township, Hsinchu County, Taiwan 30472
T) +886-3-568-7891 F) +886-3-568-7950

Product & Quotation Inquiries
+82-51-720-7529

Technical Support & A/S
+82-51-720-7519